


Contents: Check that your HV-Weather Cap contains

- Weather Cap (1).
- Weather Cap Mounting Screws (3 for HV-150CAP and HV-230CAP), (4 for HV-300CAP).
- M4 Nuts and Washers (3 for HV-150CAP and HV-230CAP), (4 for HV-300CAP).
- White mounting tabs (3 for HV-150CAP and HV-230CAP), (4 for HV-300CAP).

Inspection: Before installing check both your HV Stylvent fan and Weather Cap for any transit damage.

Installation:


- Cut a hole following the dimensions in Fig. A.

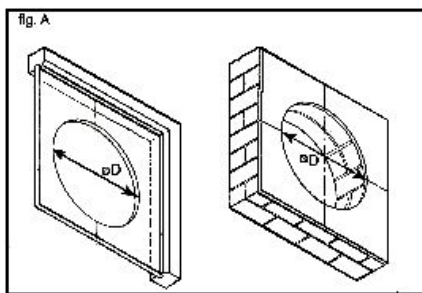


(mm)	HV-150	HV-230	HV-300
ØD Min	187	259	327
ØD Max	190	262	330

• **Preparing The HV-Fan:**

1. Remove the cover (a) by unscrewing the retaining screw (b) found on the bottom of the fan. Then press the tabs (c) and lift off the cover.

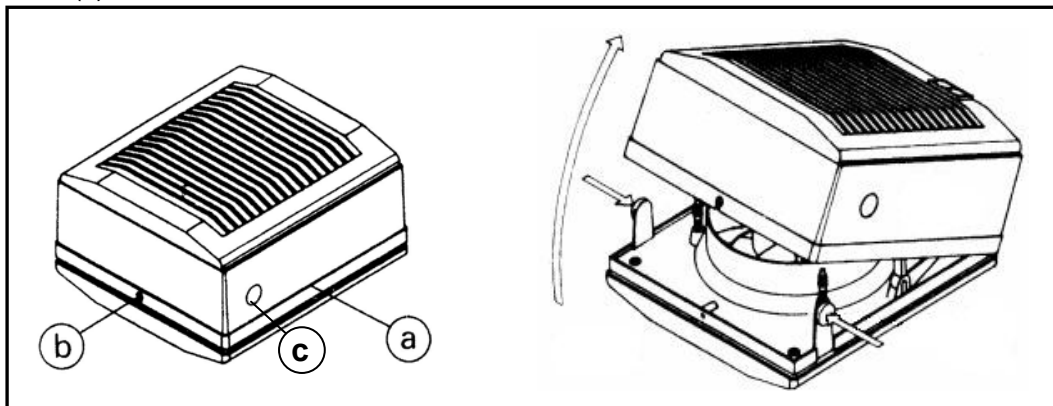


2. To remove the external grille (e) from the fan backing plate (f) unscrew the plastic fasteners (d). Note the HV-150 and HV-230 have 3 fasteners whereas the HV-300 has 4.


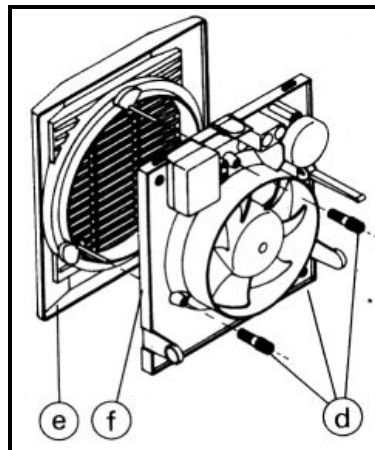


- **Preparing The Weather Cap:**

1. Remove the rubber moulded grommets (g) from the grille fastening screws (h). Keep the grommets as they are required for installing the Weather Cap. Discard the external grille (e) with its screws (h) which will now be replaced by the Weather Cap.

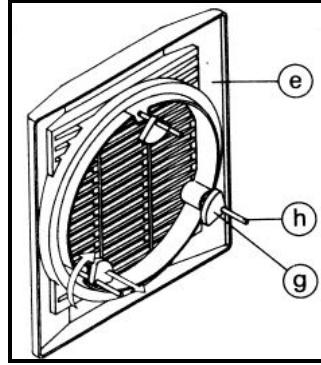


2. Put the Weather Cap Mounting Screws (p), into the holes within the collar section of the Weather Cap from the inside so the screws point out toward you. Slide on the rubber grommets (g) with the flat side up, then the white tabs (n), the washers (o) and hold them in place with the nuts (r) leave the nuts loose for now.

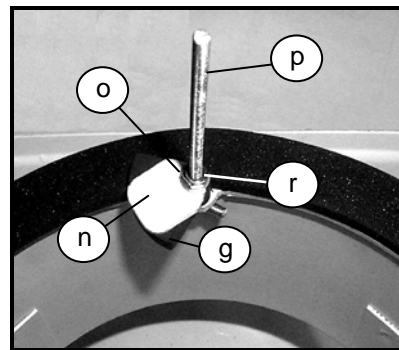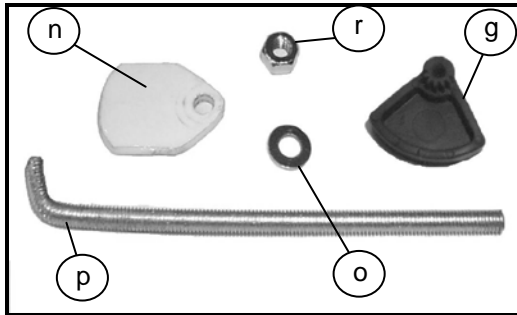


- **Installing The Weather Cap and Fan:**


1. Make sure the rubber grommets and tabs are turned inward as shown (below).

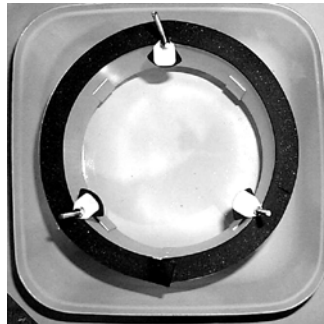


2. From the outside put the cap over the hole in the window/panel. Make sure you mount the cap the correct way up, the label located on the collar of the Weather Cap indicates the top of the cap.

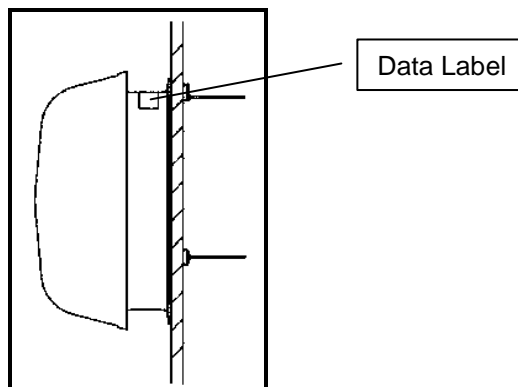


- From the inside rotate the rubber grommets (g) and white tabs (n) outward over the window or panel. Tighten the nuts (r) so the cap is held firmly in place. **Caution Do Not Over Tighten Nuts**, a small amount of movement in the rubber grommet is needed so the screws can be lined up when attaching the fan.

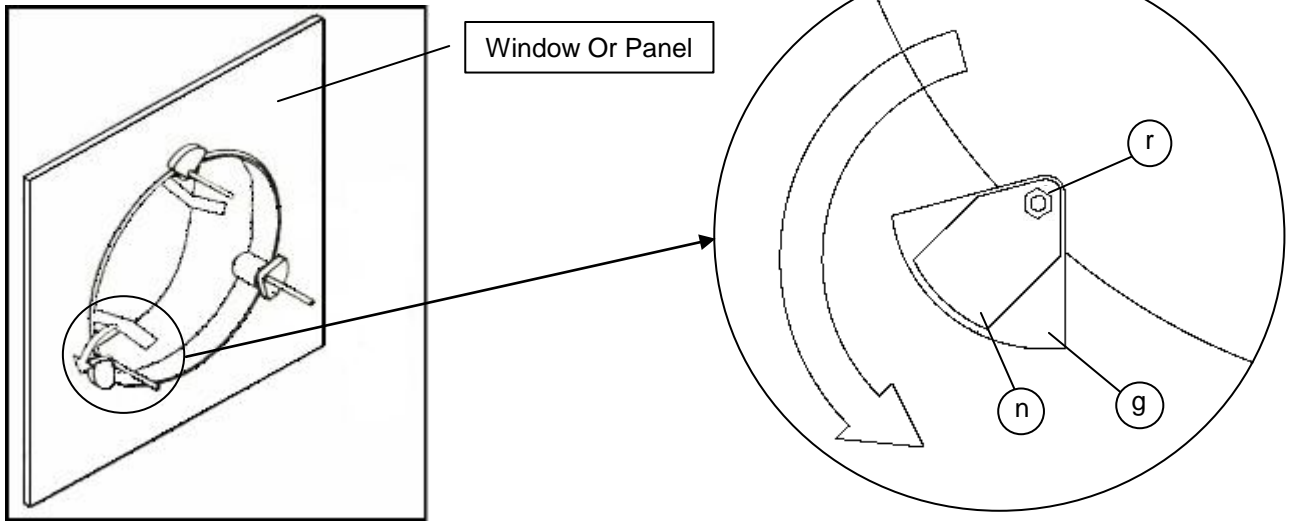

- Mount the fan backing plate (f) to the Weather Cap Mounting Screws (p) and tighten the fasteners (d). Note the orientation of the fasteners will depend on the thickness of the installation.
 - For Window or Panel 3-14mm Thick refer to (d) circled in Fig. B.
 - For Wall Mounting 14-25mm Thick refer to (d) circled in Fig. C.

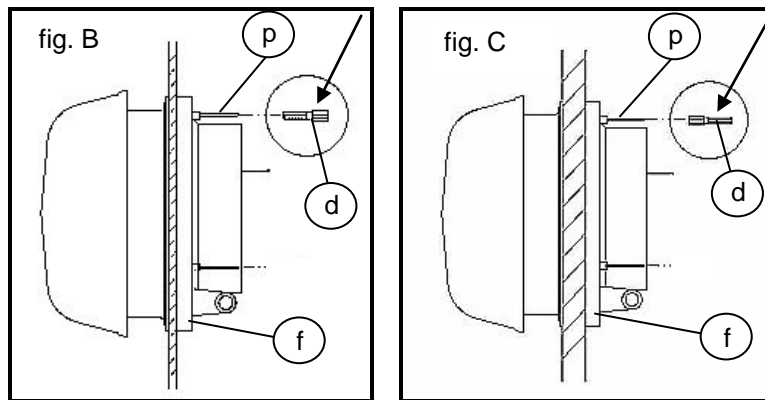

- For wiring instructions see your HV-Fan instruction leaflet
- Mount the internal cover (a) by slotting the rectangular openings (l) on top of the cover into the receivers (m) of the fan mounting plate until the two tabs (c) are correctly positioned. Then replace the locking screw (b)

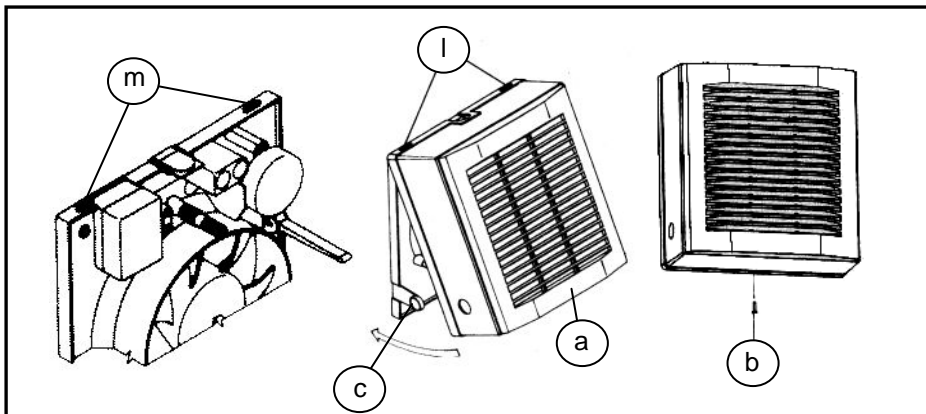

HV Weather Caps Are Distributed By Fantech Pty Ltd.

GOODS AND WARRANTY

1. When supplying goods to a consumer, the following mandated statement applies:
“Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.”
2. The benefits of this warranty are in addition to any rights and remedies imposed by Australian State and Federal legislation that cannot be excluded. Nothing in this warranty is to be interpreted as excluding, restricting or modifying any State or Federal legislation applicable to the supply of goods and services which cannot be excluded, restricted or modified.
3. Subject to the conditions and limitation below, the Company warrants products of its manufacture to be free of defects in workmanship and/or materials at the time of delivery to the Buyer.
4. Any part, assembly or portion thereof found to be defective within one year from the date of commissioning or eighteen (18) months from date of shipment from our factory, whichever is the sooner, unless expressly stated otherwise in the Company’s Publications or Literature, will be repaired or exchanged F.O.B factory.
5. The Company reserves the right to replace defective parts of the goods with parts and components of similar quality, grade and composition where an identical component is not available.
6. Goods presented for repair may be replaced by refurbished goods of the same type rather than being repaired. Refurbished parts may be used to repair the goods.
7. Goods or parts that have been returned for repair (except where the repair is as a result of the Company’s failure to comply with the statutory guarantees in the ACL) or warranty assessment are deemed to have been abandoned by the Buyer if not collected within 30 days after the Company has notified the Buyer in writing of the warranty assessment outcome or the completed repair.
8. The Company reserves the right to dispose or otherwise deal with an abandoned product or part at its discretion.
9. This warranty does not apply if:
 - (i) the goods have not been paid for by the Buyer as per the credit terms provided; or
 - (ii) the goods have not been installed in accordance with AS NZS 3000/2000 Australian/New Zealand Wiring rules; or
 - (iii) the goods have been misused or neglected.
10. The Company assumes no responsibility under this warranty for the labour costs involved in the removal of defective parts, installation of new parts or service charges related thereto.
11. If a fault covered by this warranty occurs, the Buyer must first contact the Company at the contact address listed below.
12. Any warranty claim must be accompanied by:
 - (i) proof of purchase;
 - (ii) written details of the alleged defect; and
 - (iii) appropriate documentation (such as installation and maintenance records etc).
13. The Company shall have the option of requiring the return of the defective part (transportation prepaid by the Buyer) to establish the claim.
14. The Company makes no warranties or representations other than set out in this clause 7.
15. The repair or exchange of the goods or part of the goods, is the absolute limit of the Company’s liability under this express warranty.

	<h2>Fantech Contacts</h2>	
	<p>Head Office Victoria - Melbourne A.B.N. 11 005 434 024 Ph: +61 (3) 9554 7845 Fax: +61 (3) 9554 7833 Email: info@fantech.com.au</p>	<p>New Zealand Auckland H.O. (09) 444 6266 Christchurch (03) 379 8622 Wellington (04) 566 0532</p>
<p>Australia Adelaide (08) 8294 0530 Brisbane (07) 3299 9888 Darwin (08) 8947 0447 Melbourne H.O. (03) 9554 7845 Perth (08) 9209 4999 Sydney (02) 8811 0400</p>	<p>Asia For agents in the Asian region call (603) 7846 0340 or visit www.eltafantechasia.com</p>	<p>www.fantech.com.au</p>